

Key information at a glance:

Handling your pool lighting, installation and testing, winter operation

Dear Customer,

thank you very much for choosing our high-quality pool lighting. To ensure a long service life and trouble-free operation of your LED pool light, please observe the following instructions:

1. General handling instructions

- Avoid subjecting the lights to any mechanical stress, particularly pressure or impact.
- The cable must not be kinked or subjected to tension.
- Use only ballasts, power supplies and control units approved for use with the lights.

2. Installation and testing

- Commissioning must only be carried out by a qualified technician.
- Important: The LED lights must only be operated underwater. Operation out of the water (e.g. for functional testing) will cause overheating and consequently damage the light.
- The pool must be filled to a level above the lights before the lighting is switched on.
- Ensure that cable connections are secure and correct in accordance with the installation instructions.

3. Winter operation

- Switch the lighting off completely during the winter months.
- When draining the pool, ensure that no residual moisture remains in the lights – store them in a dry place if necessary (applies to removable systems).
- For permanently installed systems: do not drain the pool water completely or cover the lights to protect them from frost.
- Before recommissioning in the spring, check the electrical connections for leaks and ensure they are in good condition.

4. Important note

Incorrect commissioning or storage may result in the loss of warranty claims. Please follow our instructions carefully or contact our service team if you have any questions.